

4-Step Easy Start Guide

Thank you for purchasing a MediProducts Mobile battery backup system!

We are certain you will now be at ease knowing that your most valuable equipment has the protection it needs. This quick start guide will assist you in getting your Mobile system ready to deploy as soon as possible

1 Unpack Shipment

Remove any straps, plastic and/or packing materials from pallet.




Note:
Batteries in Mobile Units arrive pre-installed. Unless additional batteries were ordered at time of purchase, none will be located on pallet.

2 Remove System From Pallet

Carefully slide the system forward off the shipping blocks.

Be cautious not to damage the product, as these systems are of considerable weight.

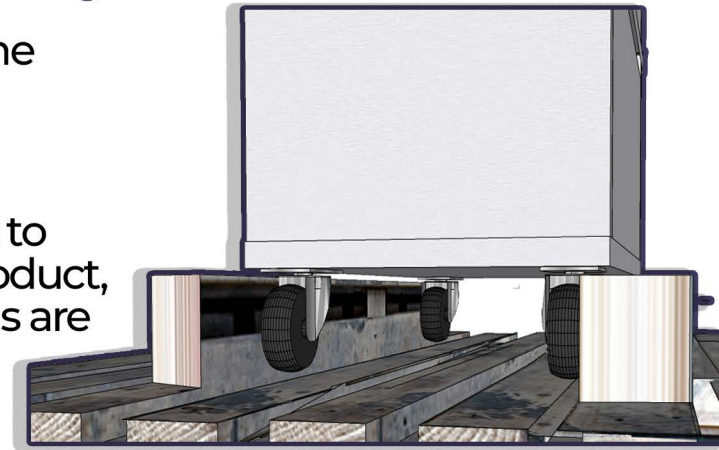

Note:
In order to ensure safety of system, mobile units are packaged on shipping blocks which rest between planks of the pallet. This takes the unit's weight off of the casters & prevents movement while in-transit.

3 Plug System Into Power Outlet

Locate power cord and plug unit into a standard wall outlet.

A dedicated circuit for this outlet is preferred.



4 System Startup

All Systems: First, plug Unit into dedicated power outlet

V-Series Controller:

Turn control switch to the "On" Position.

Both "Mains On" and "Inverter On" indicators should illuminate. Charging indicator may vary depending on current level of charge.



T-Series Controller:

Turn control switch to the "Auto/Invert" Position. "Line In" indicator light should also illuminate at the same time.



Note:
Refer to the procedures listed in the user operating and testing guide for commissioning, using and testing the system.

Complete!

Your MediProducts Mobile battery backup unit is fully installed and ready to protect your most valuable assets. If you're having any trouble refer to the full-length installation guide or call us toll-free at: 1-800-765-3237.