Protect Your Vaccines from Power Outages



Refrigerator & Freezer Backup Power Solutions

MEDI+PRODUCTS

BACK-UP POWER SYSTEMS

Ideal Solution for:

- + Hospitals
- + Multi Specialty Practices
- + Pediatricians
- + Oncology & Cancer Care Centers
- + Rheumatology
- + Medical Lab & Research

Why Medi Products?

Having years of experience working with medical equipment and working in medical practices, we understand the challenges our customers face searching for a suitable battery backup system to support their vaccine or medical refrigerator.

The combination of our medical background, and experience with electricity and batteries, positions us to be a leader in the medical battery backup power space.

Fuel powered generators are usually almost impossible to install in large medical buildings or inner-city practices and are very costly. Another complication is executing an installation of a power system or generator in a clean medical environment, with a constant flow of patients, can be a logistical nightmare.

Having the know-how and understanding of all these complexities, in addition to the fact that our products are designed precisely to suit the needs of the healthcare provider, Medi-Product stands out as the best source for medical backup power.



(Optional) Power Outage Remote Alert

System: The optional Power Outage Alert System notifies up to four telephone numbers when a power outage occurs. A bonus feature of this system includes refrigerator temperature monitoring, if the temperature probe is also purchased. It has a keypad for easy programming and a built-in speaker which alerts users while onsite in addition to the remote telephone call.





How It Works

Power to the Silent Sentry System gets fed directly from the circuit breaker panel. While utility power in on, the input power passes through the system and feeds the system's branch circuit breakers which feeds the outlet the refrigerator is plugged into.


Upon a power failure the SILENT SENTRY™ automatically transfers the energy source from utility to battery, instantly supplying power to the vaccine fridge or pharmaceutical refrigerator or freezer immediately, providing 24/7 protection 365 days of the year.

Space Saving Design

This wall mounted, battery operated system is revolutionary in its ultra compact, low profile design. Its body is only 14" wide and mounts flush on or in between wall studs 16" O.C. It's mounting flanges can be relocated to reduce protrusion from the wall to as little as four and a half inches, allowing the system to be mounted out of the way behind doors or in utility closets and mobile offices. This system uses no floor space whatsoever.


Standalone Systems

- ✓ No electrical wiring required
- ✓ Easy installation
- ✓ Plug & Play no electrical permits
- Compact design minimal space requirements
- Can power more than one appliance
- ✓ Incorporates into existing space easily

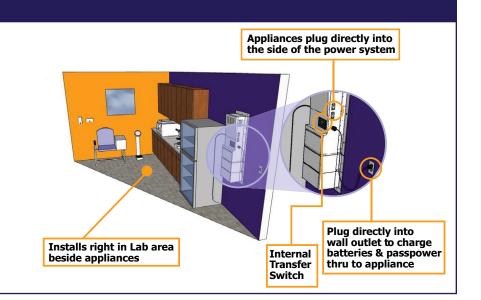


Hardwire Systems

- ✓ Ideal for small labs with no extra space
- ✓ Ideal for new construction
- ✓ Each appliance is supplied with a dedicated circuit
- ✓ Power more than one appliance off one power system
- ✓ Install system in electrical supply closet or anywhere outside of the lab area

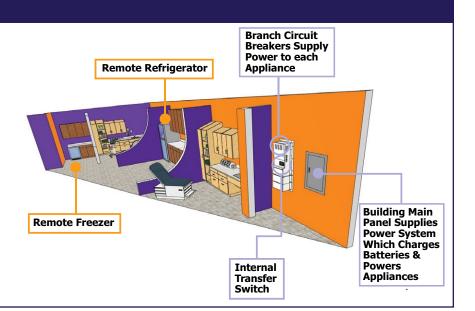

Mobile Systems

- ✓ No installation
- ✓ Plug & Play
- ✓ Portable on wheels
- ✓ Can power more than one appliance
- ✓ Flexibility for future office moves
- **▼** Four duplex receptacles
- ✓ Internal transfer switch
- ✓ Stainless steel cabinet suitable for clean areas
- ✓ Undercounter storage height

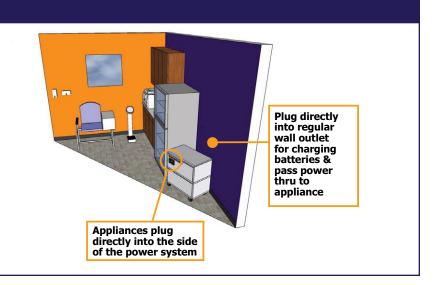

MEDI+PRODUCTS

BACK-UP POWER SYSTEMS

55 Fields Lane North Salem, NY 10560 Phone: 800-765-3237

Fax: 203-487-7423

Email: sales@mediproducts.net



Easy Installation:

Our battery backup systems can be installed by anyone, simply by following the provided "easy installation" instructions.

Our mobile systems don't even require any installation – they just roll into place, plug it into the wall and you're ready to go!

Our Standalone systems are easily surface mounted to the wall and can be taken down and moved should your practice move to a new location in the future.

Our Hardware systems include an internal transfer switch and branch circuit breakers which reduce the labor and materials required of an electrician during installation, these features are not typically offered when installing a conventional UPS system or a generator.

Warranty & Our Commitment:

Peace of Mind is built-in with our two-year warranty. It is our commitment that whichever solution you are provided with will support your appliance as specified.

Unlimited lifetime technical support via telephone is complementary. Plus, as an industry leader and established **15 year old company**, our Research & Design continues to position us at the forefront of the medical back-up power needs.

Contact us today for a Free Power Evaluation!

Call Toll Free:

1.800.765.3237

Or visit our website at:

mediproducts.net