

MEDI+PRODUCTS

BACK-UP POWER SYSTEMS

**PREVENTIVE
MAINTENANCE
AND SERVICE PLANS**

We take care of your backup power, so you can take care of what matters most.




NATIONWIDE SERVICE PLANS

From Big Cities to Small Towns, We Keep Your Healthcare Facility Powered-Up and Your Mind at Ease

Not Just *Preventive* Maintenance, It's *Proactive* Maintenance

The key to long lasting and reliable power is eliminating threats to your facility before they happen. Reliable backup power prevents costly downtime, protects patients, and guarantees ultimate peace of mind. That's where we step in. By letting the same experts who built your battery backup unit maintain it, you unlock direct access to key resources like OEM components, factory trained technicians and manufacturer blueprints without needing to lift a finger. Because, It's more than just a preventive maintenance *plan*, it's a proactive maintenance *solution*.

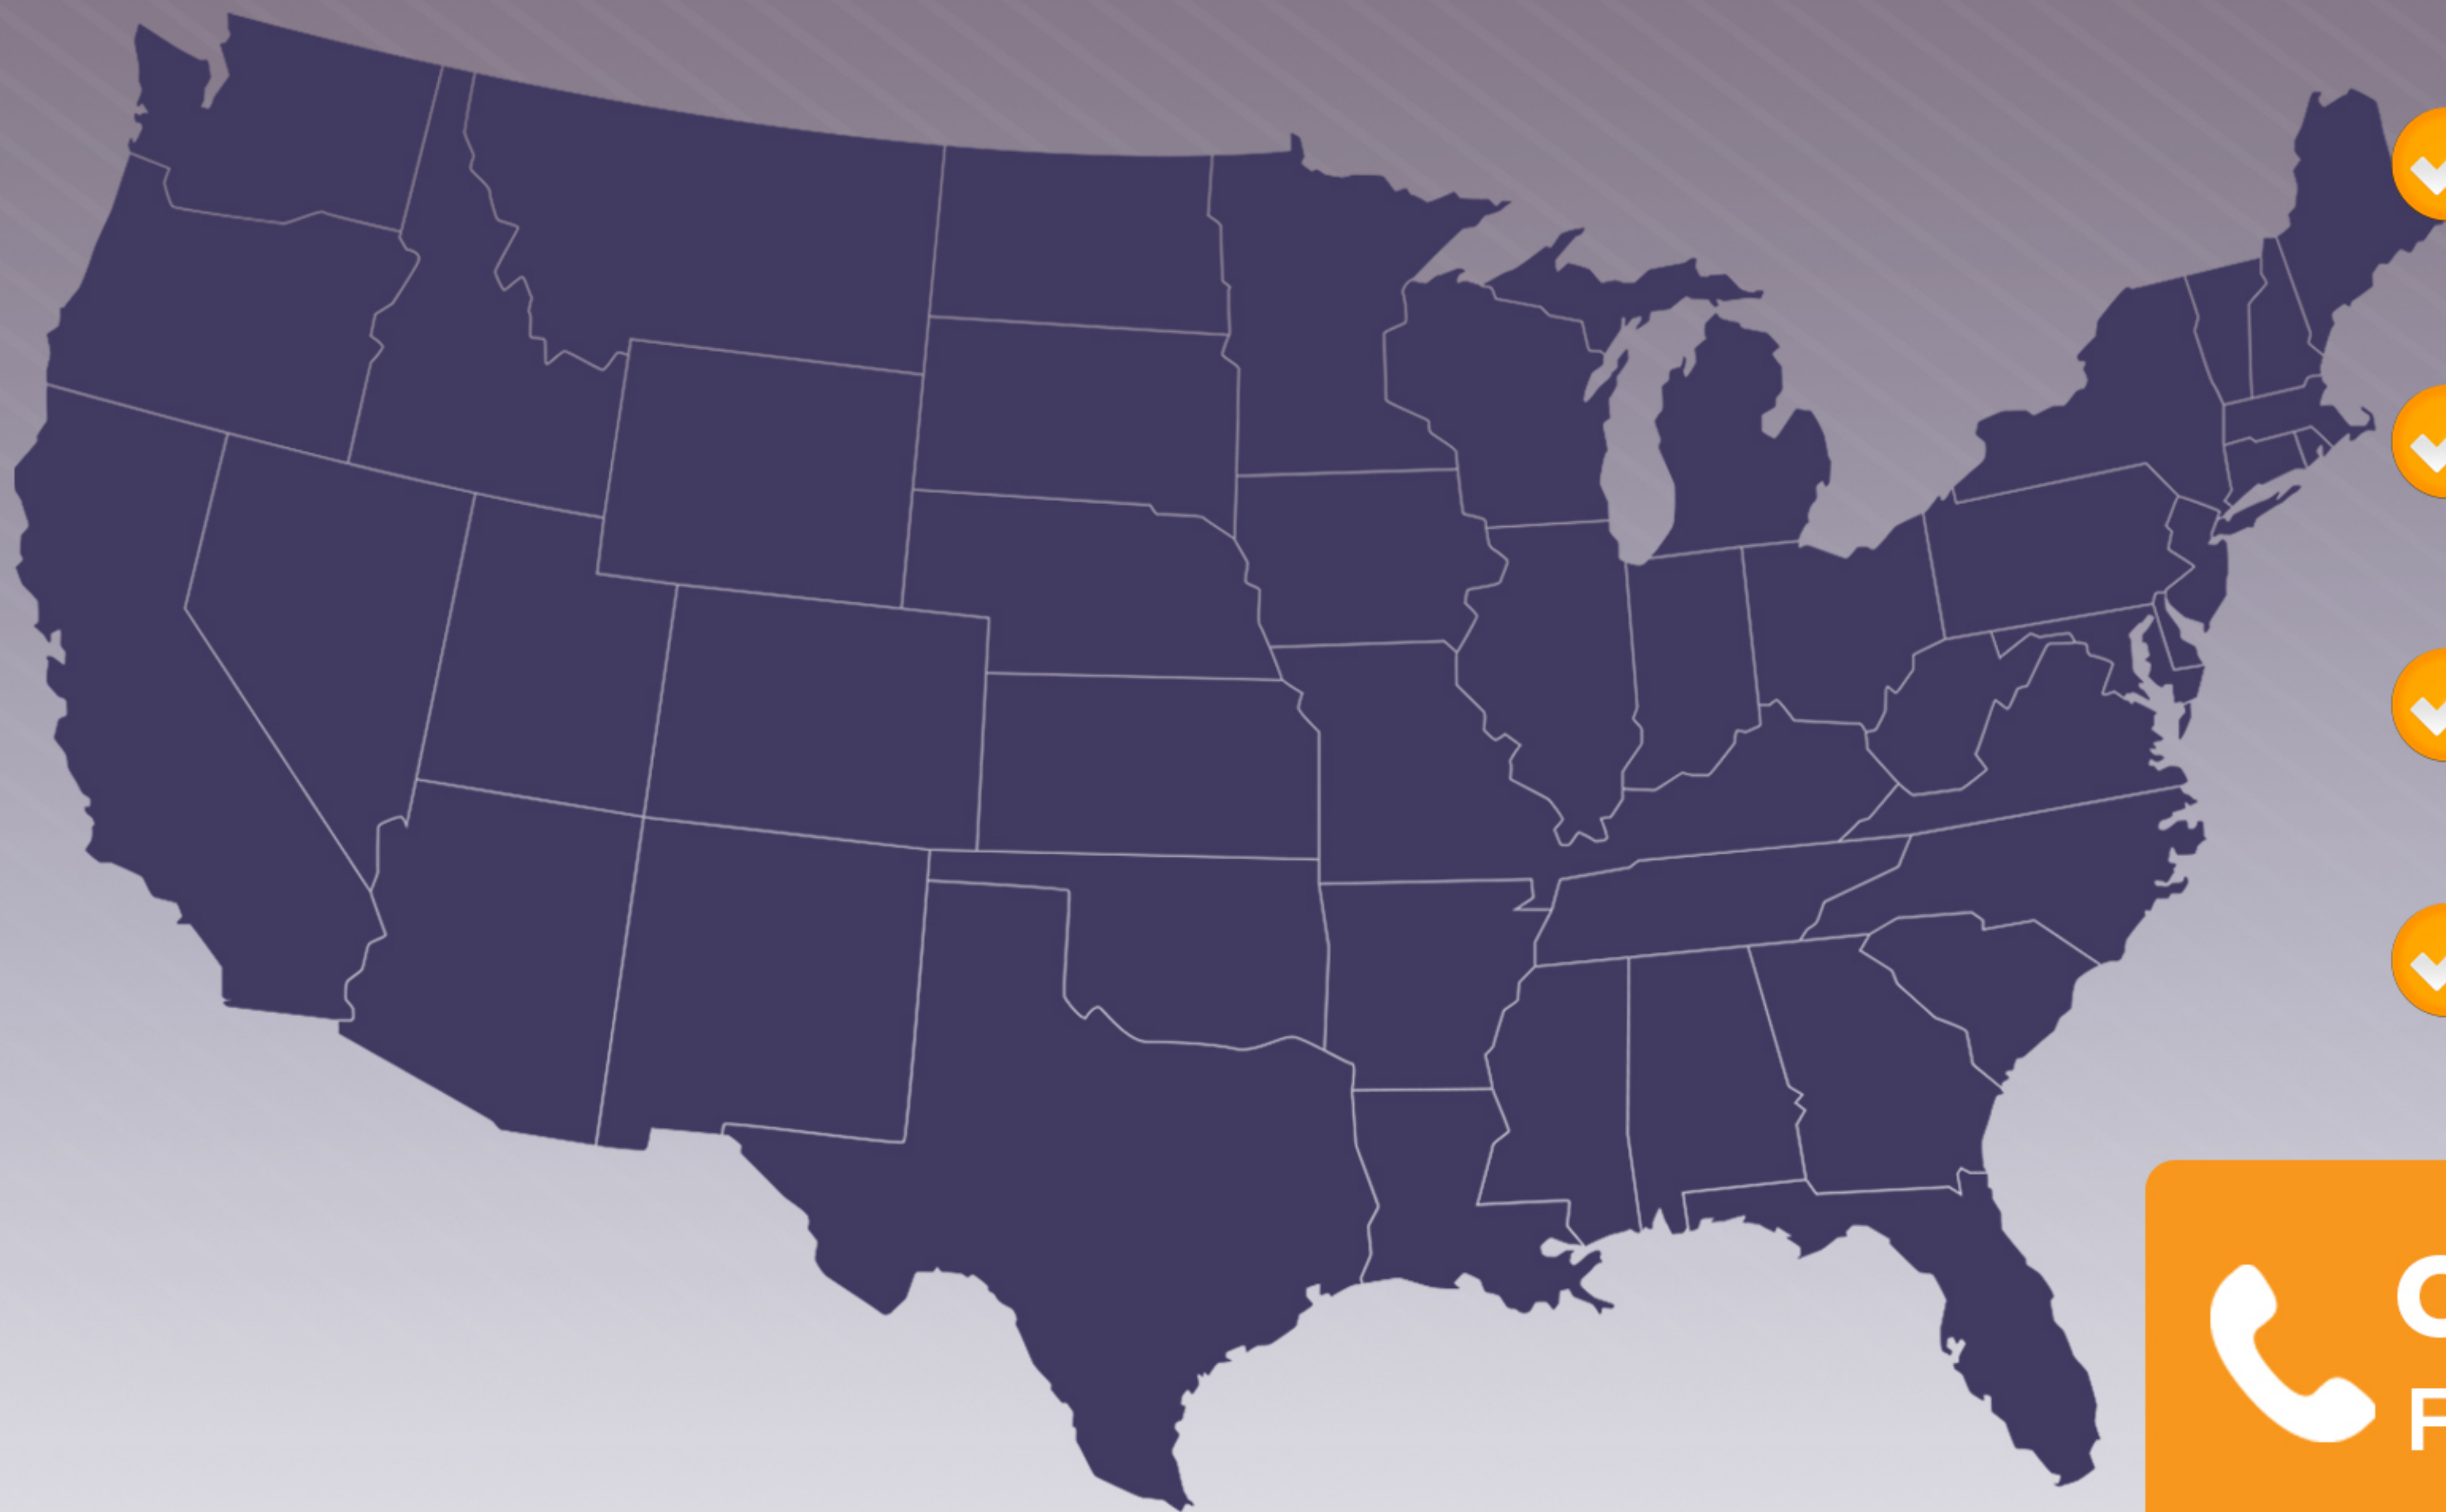

- ✓ Factory Trained Technicians
- ✓ Flexible Scheduling Options
- ✓ Full Front-to-Back Inspection
- ✓ On-Call Tech Support



CONTACT US TODAY
FOR MORE INFORMATION

MEDI+PRODUCTS

BACK-UP POWER SYSTEMS

281 Fields Lane, Suite 2B Brewster, NY 10509
Phone: (203) 348 2886 Toll Free: (800) 765 3237
Fax: (203) 612 5417 Website: www.mediproducts.net

FLEXIBLE SERVICE OPTIONS

SERVICE OFFERINGS	BRONZE	SILVER	GOLD
Scheduling & Contract Renewal Notifications	✓	✓	✓
Telephone Technical Support Services	✓	✓	✓
Multi-Year Contract Special Pricing	✓	✓	✓
Annual Comprehensive PM Service Visit	✓	✓	✓
Semi-Annual Standard PM Service Visit		✓	✓
Quarterly Standard PM Service Visit		✓	✓
Replacement Repair Parts			✓
Emergency Repair Services			✓

We tapped into over 30 years of expert bio-medical manufacturing and repair knowledge to develop a detailed and fully comprehensive inspection criteria for your battery backup system. Our factory trained technicians will ensure your battery backup systems remain fully functional by uncovering and solving problems before they happen. Regardless of the size or scale of your organization, we have multiple options to ensure the perfect balance between budget and service—maximizing your facility’s uptime.

PREVENTIVE MAINTENANCE SERVICE SCOPE OF WORK:	STANDARD PM SERVICE	COMPREHENSIVE PM SERVICE
Visual Inspection of Components	✓	✓
Full Inspection Report & Inspection Label	✓	✓
Test of Power Outage Alert System (if applicable)	✓	✓
2-Hour Battery Runtime and Capacity Test	✓	✓
Measure & Record Charging Voltages	✓	✓
Measure & Record Battery Voltages	✓	✓
Measure & Record Amperages of Battery Cables		✓
Full-Load Test of System		✓
Cleaning of all System Vents and Fans		✓
Measure and Record In-Rush Currents & Overall Loads		✓
Calculate Total Energy Consumption		✓
Repair Any Faulty Electrical Connections		✓
Measure and Record Input/Output Voltages		✓
Battery Fuse Replacement		✓



WHY MEDI+PRODUCTS

With over 30 years of experience building and repairing medical equipment, Medi-Products has designed the most thorough and comprehensive maintenance plan possible to ensure your backup power solution receives the care it requires. Whether it's a brand new system you've recently purchased or you're an existing customer whose backup power is going strong after a decade of use, we've got you covered. With step-by-step instructions directly from the engineers who designed them, our factory certified technicians will ensure every component from front to back continues to deliver consistent and reliable power for years to come, giving you the confidence you need to get the job done. And with convenient and flexible scheduling options, you can ensure your regular service won't disrupt your normal operations—allowing you and your team to focus their attention where it's needed

A Preventive Service Plan Is the Perfect Solution for Every Organization, Big or Small. Such as:

- ✓ Community Health Clinics
- ✓ Office-Based Surgery Centers
- ✓ Ambulatory Surgery Centers
- ✓ Pharmacies
- ✓ Laboratories
- ✓ Universities
- ✓ Schools
- ✓ And More!



MEDI+PRODUCTS

BACK-UP POWER SYSTEMS

CALL OR CLICK TO SCHEDULE YOUR ASSESSMENT TODAY

 **800 765 3237**

 mediproducts.net/maintenance/form

SCAN ME

