


Hardwire - 3 Phase - Battery Backup Power System



HOW OUR SYSTEMS WORK:


STANDBY MODE

Utility power charges the system and flows through to power the appliance.

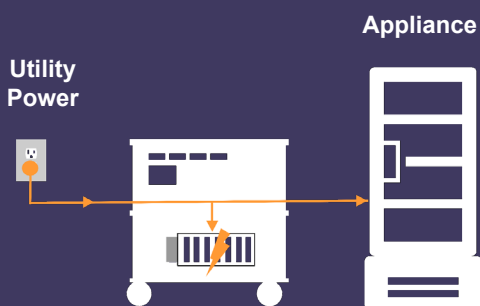

POWER OUTAGE

When utility power is lost the system auto transfers to draw from the battery bank within a second

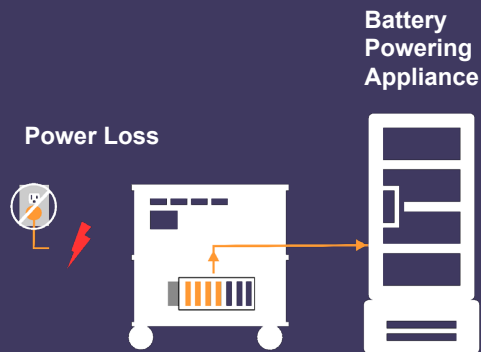

RECHARGE MODE

When utility power is restored the system auto transfers back to utility power.



MHW15080V-3PH

MEDI+PRODUCTS

Hardwire - 3 Phase - Battery Backup Power System

ELECTRICAL INFORMATION:

Model Numbers	Wattage	Line Power	Load Power	Conductors	Battery Type
MHW15080V-3PH	15,000	208 Volts 50 Amps	208 Volts 50 Amps	3 Legs 1 Netural 1 Ground	AGM

SYSTEM SIZE

Model Numbers	Waveform	Width (A)	Depth (B)	Height (C)	Weight (lbs)	Cabinets
MHW15080V-3PH	Pure	63.00"	16.50"	42.25"	915	2

Heat Output: *Full Bulk Charge Mode: 8700 BTU per hr*
Inverting @ Full Rated Wattage: 13,500 BTU per hr
Inverting @ 0 Watts: 510 BTU per hr

Note: *Unit Onsite Special Certification Inspection - per customer request.*

Warranty: *2 year System Warranty*

UNIT DIMENSIONS

Line & Load Bypass & Disconnect
Switches (can be mounted on the right or
left side)

