


MHW15KW102KWH-3PH

MEDI+PRODUCTS


Free Standing - Hardwire - Battery Backup Power System

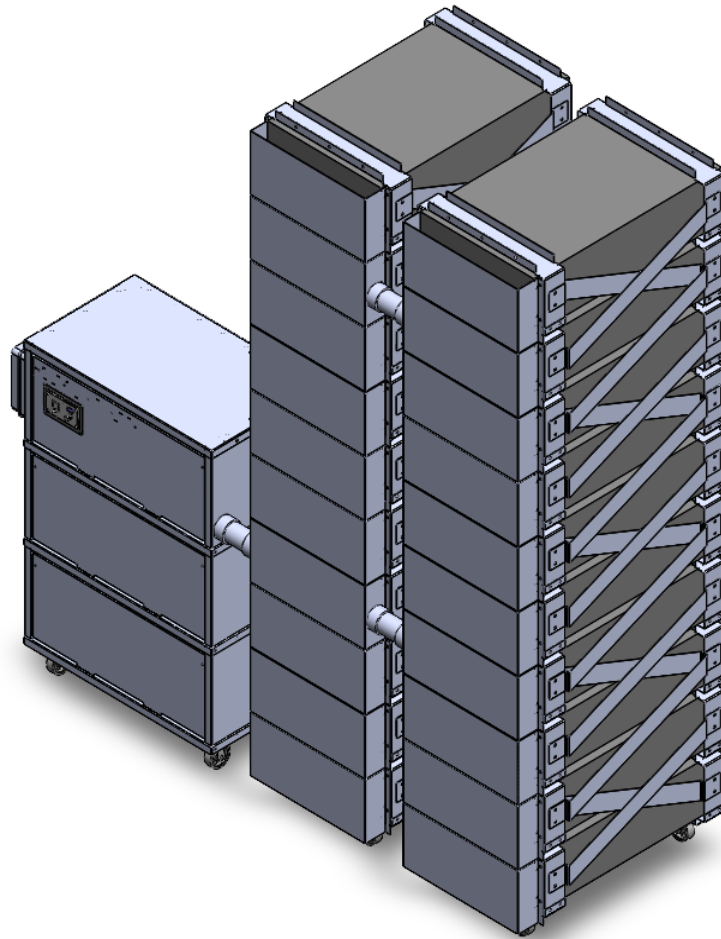

HOW OUR SYSTEMS WORK:


STANDBY MODE

Utility power charges the system and flows through to power the appliance.

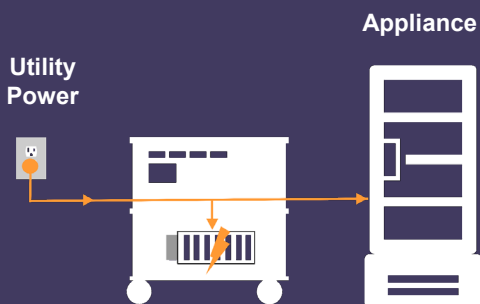


POWER OUTAGE

When utility power is lost the system auto transfers to draw from the battery bank within a second

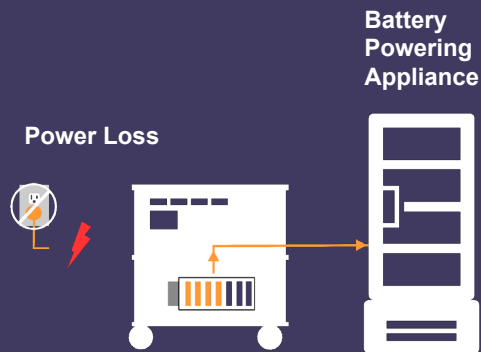

RECHARGE MODE

When utility power is restored the system auto transfers back to utility power.

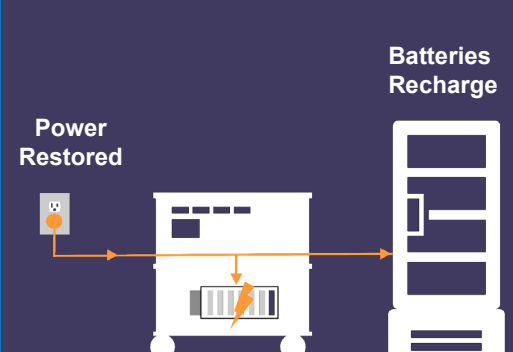

MHW15KW102KWH-3PH

MEDI+PRODUCTS

Free Standing - Hardwire - Battery Backup Power System

ELECTRICAL INFORMATION:

Model Number	Wattage	KWH	Phase	Line Power	Load Power	Conductors	Battery Type
MHW15KW102KWH-3PH	15,000	102	3 Phase	208-Volts 50 Amps	208-Volts 50 Amps	3 Legs, 1 Netural, 1 Ground	Lithium Ion

SYSTEM SIZE

Model Number	Waveform	Width (A)	Depth (B)	Height (C)	Weight (lbs)	Cabinets
MHW15KW102KWH-3PH	Pure	80.00"	31.00"	87.00"	2,360	3

Note: Unit Onsite Special Certification Inspection - per customer request.

Warranty: 2 Year System Warranty - 4 Year Battery Warranty

UNIT DIMENSIONS

