


# MHW600255V

## MEDI+PRODUCTS


### Free Standing - Hardwire - Battery Backup Power System

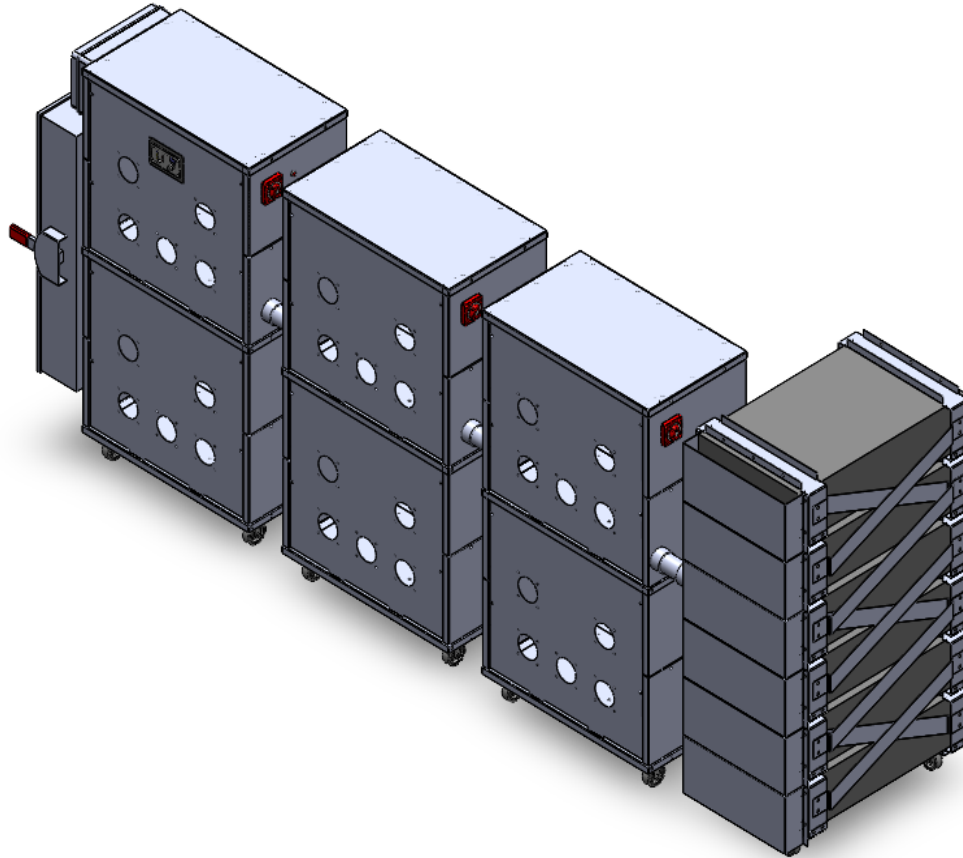

## HOW OUR SYSTEMS WORK:


### STANDBY MODE

*Utility power charges the system and flows through to power the appliance.*

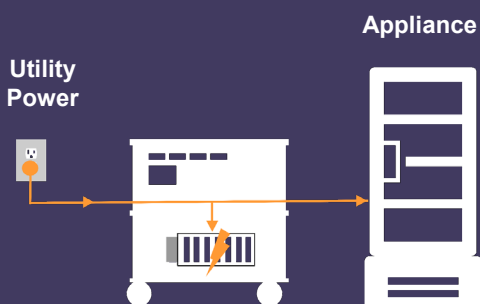

### POWER OUTAGE

*When utility power is lost the system auto transfers to draw from the battery bank within a second*

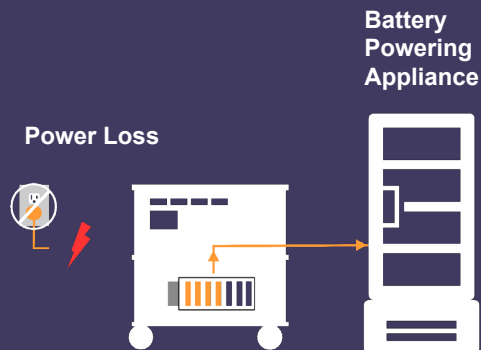

### RECHARGE MODE

*When utility power is restored the system auto transfers back to utility power.*



## Free Standing - Hardwire - Battery Backup Power System

### ELECTRICAL INFORMATION:

Model Number	Wattage	KWH	Phase	Line Power	Load Power	Conductors	Battery Type
MHW600255V	60,000	30.6	3 Phase	208-Volts 200 Amps	208-Volts 200 Amps	3 Legs, 1 Netural, 1 Ground	Lithium Ion


### SYSTEM SIZE

Model Number	Waveform	Width (A)	Depth (B)	Height (C)	Weight (lbs)	Cabinets
MHW600255V	Pure	126.00"	31.00"	55.00"	2,022	4

**Note:** Unit Onsite Special Certification Inspection - per customer request.

**Warranty:** 2 Year System Warranty - 4 Year Battery Warranty

### UNIT DIMENSIONS

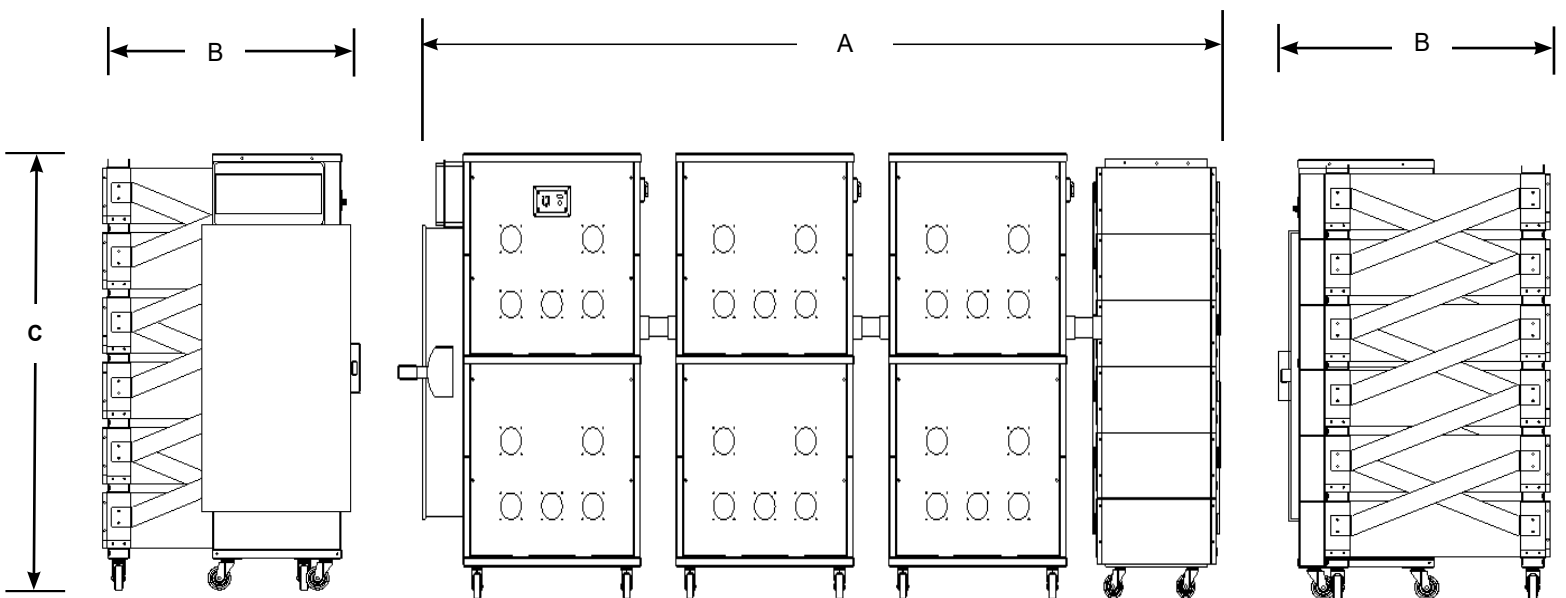

**LEFT SIDE**

**FRONT**

**RIGHT SIDE**