

MHW60240V

MEDI+PRODUCTS


Free-Standing Hardwire - Battery Backup Power System



HOW OUR SYSTEMS WORK:


STANDBY MODE

Utility power charges the system and flows through to power the appliance.

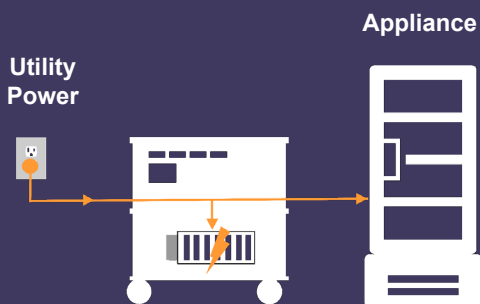


POWER OUTAGE

When utility power is lost the system auto transfers to draw from the battery bank within a second

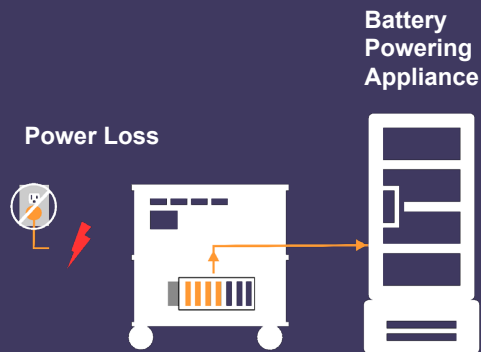

RECHARGE MODE

When utility power is restored the system auto transfers back to utility power.

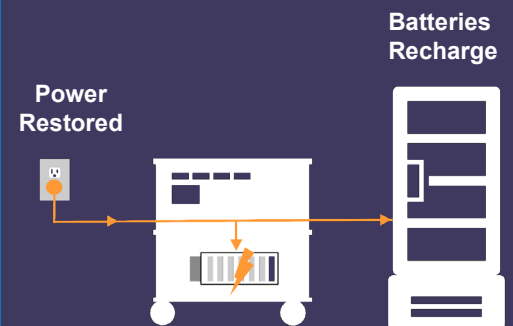

Free-Standing Hardwire - Battery Backup Power System

ELECTRICAL INFORMATION

Model Number	Wattage	KWH	Line Power	Load Power	Conductors	Battery Type
MHW60240V	6,000	28.8	120/240 Volts, 30/60 Amps	120/240 Volts, 30/60 Amps	2 Legs 1 Neutral 1 Ground	AGM

SYSTEM SIZE

Model Number	Waveform	Width (A)	Depth (B)	Height (C)	Weight (lbs)	Cabinets
MHW60240V	Pure	63.00"	16.50"	54.50"	1,755	2

Heat Output: Full Bulk Charge Mode: 8700 BTU per hr
Inverting @ Full Rated Wattage: 13,500 BTU per hr
Inverting @ 0 Watts: 510 BTU per hr

Note: Unit Onsite Special Certification Inspection - per customer request.

Warranty: 2 year System Warranty - 4 year Battery Warranty

UNIT DIMENSIONS

