

# MHW6080V

## MEDI+PRODUCTS


### Free-Standing Hardwire - Battery Backup Power System



## HOW OUR SYSTEMS WORK:


### STANDBY MODE

*Utility power charges the system and flows through to power the appliance.*

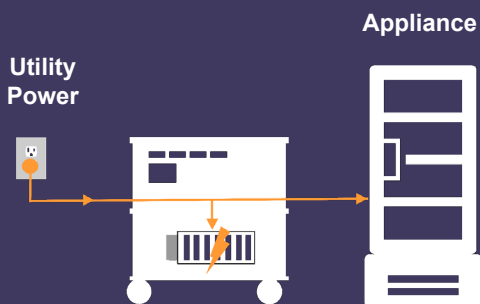

### POWER OUTAGE

*When utility power is lost the system auto transfers to draw from the battery bank within a second*

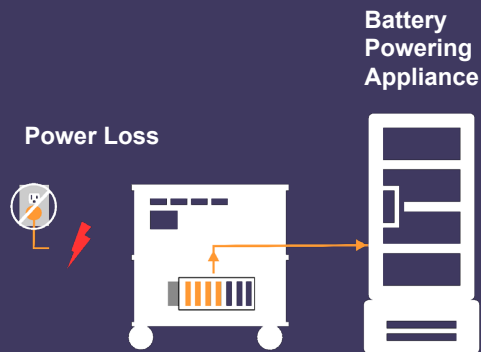

### RECHARGE MODE

*When utility power is restored the system auto transfers back to utility power.*



## Free-Standing Hardwire - Battery Backup Power System

### ELECTRICAL INFORMATION

Model Number	Wattage	KWH	Line Power	Load Power	Conductors	Battery Type
MHW6080V	6,000	9.6	208/240 Volts, 30 Amps	208/240 Volts, 30 Amps	2 Legs 1 Neutral 1 Ground	AGM

### SYSTEM SIZE

Model Number	Waveform	Width (A)	Depth (B)	Height (C)	Weight (lbs)	Cabinets
MHW6080V	Pure	32.25"	16.50"	54.75"	1245	1

**Heat Output:** Full Bulk Charge Mode: 8700 BTU per hr  
Inverting @ Full Rated Wattage: 13,500 BTU per hr  
Inverting @ 0 Watts: 510 BTU per hr

**Note:** Unit Onsite Special Certification Inspection - per customer request.

**Warranty:** 2 year System Warranty - 4 year Battery Warranty

## UNIT DIMENSIONS

