


# MHW60KW102KWH-208V-3PH

MEDI+PRODUCTS


Free Standing - Hardwire - Battery Backup Power System

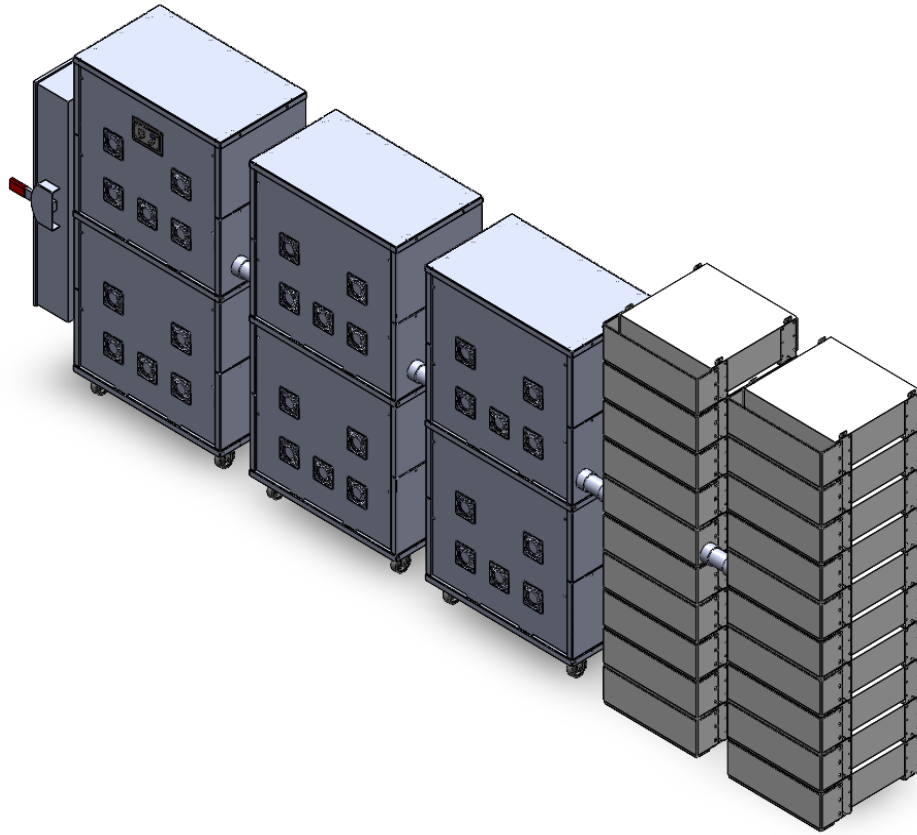

## HOW OUR SYSTEMS WORK:


### STANDBY MODE

*Utility power charges the system and flows through to power the appliance.*

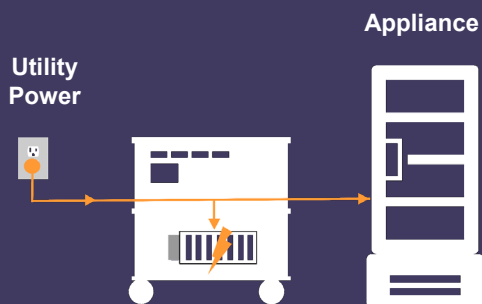


### POWER OUTAGE

*When utility power is lost the system auto transfers to draw from the battery bank within a second*

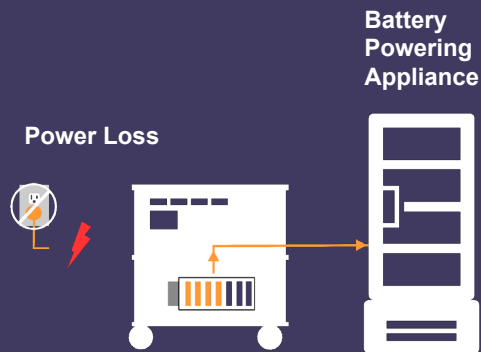

### RECHARGE MODE

*When utility power is restored the system auto transfers back to utility power.*

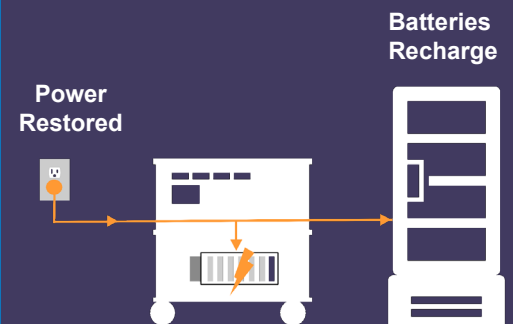

# MHW60KW102KWH-208V-3PH

MEDI+PRODUCTS

Free Standing - Hardwire - Battery Backup Power System

## ELECTRICAL INFORMATION:

| Model Number            | Wattage | KWH | Phase   | Line Power         | Load Power         | Conductors                  | Battery Type |
|-------------------------|---------|-----|---------|--------------------|--------------------|-----------------------------|--------------|
| MHW60KW102K-WH-208V-3PH | 60,000  | 102 | 3 Phase | 208-Volts 200 Amps | 208-Volts 200 Amps | 3 Legs, 1 Neutral, 1 Ground | Lithium Ion  |

## SYSTEM SIZE

| Model Number           | Waveform | Width (A) | Depth (B) | Height (C) | Weight (lbs) | Cabinets |
|------------------------|----------|-----------|-----------|------------|--------------|----------|
| MHW60KW102KWH-208V-3PH | Pure     | 150.00"   | 20.00"    | 62.00"     | 3,905        | 5        |

**Note:** Unit Onsite Special Certification Inspection - per customer request.

**Warranty:** 2 Year System Warranty - 4 Year Battery Warranty

## UNIT DIMENSIONS

