



### SILENT SENTRY STANDALONE SYSTEM

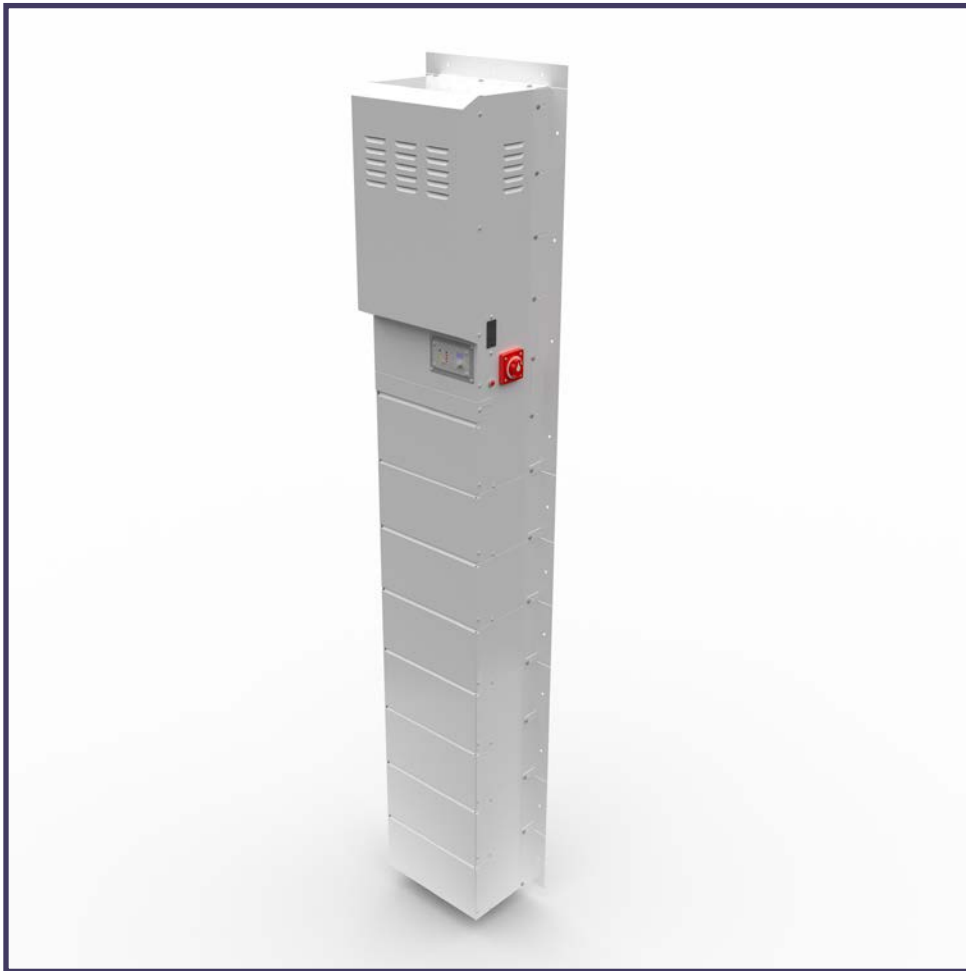

## HOW OUR SYSTEMS WORK:


### STANDBY MODE

*Utility power charges the system and through to power the appliance.*

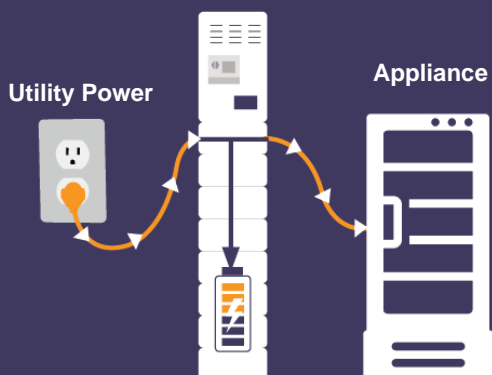


### POWER OUTAGE

*When utility power is lost the system auto transfers to draw from the battery bank within a second*

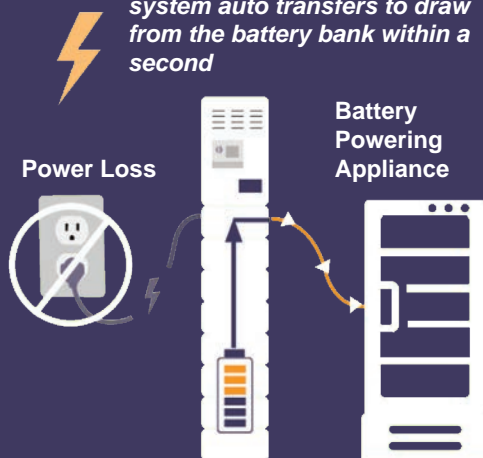


### RECHARGE MODE

*When utility power is restored the System auto transfers back to utility power.*

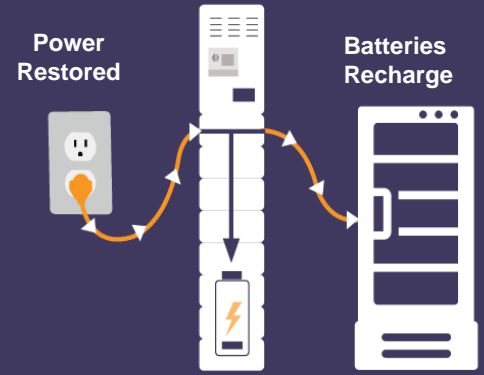

## SILENT SENTRY STANDALONE SYSTEM

### ELECTRICAL INFORMATION :

Model Number	Wattage	KWH	Phase	Line Power	Load Power	Conductors	Battery Type	NEMA Type
SACS5080V	5,000	9.6	Single	120 Volts 20 Amps	120 Volts 20 Amps	1 Leg, 1 Neutral, 1 Ground	AGM (48v Configuration)	5-20 

### SYSTEM SIZE :

Model Number	Waveform	Width (A)	Depth (B)	Height (C)	Weight (lbs)	Cabinets
SACS5080V	Pure	18.00"	12.00"	94.50"	830	1

**Heat Output:** *Full Bulk Charge Mode: 1450 BTU per hr*  
*Inverting @ Full Rated Wattage: 2250 BTU per hr*  
*Inverting @ 0 Watts: 85 BTU per hr*

**Note:** *Unit Onsite Special Certification Inspection - per customer request.*

**Warranty:** *2 Year System Warranty - 4 Year Battery Warranty*

## UNIT DIMENSIONS

