


## SILENT SENTRY HARDWIRE SYSTEM



## HOW OUR SYSTEMS WORK:


### STANDBY MODE

*Utility power charges the system and through to power the appliance.*

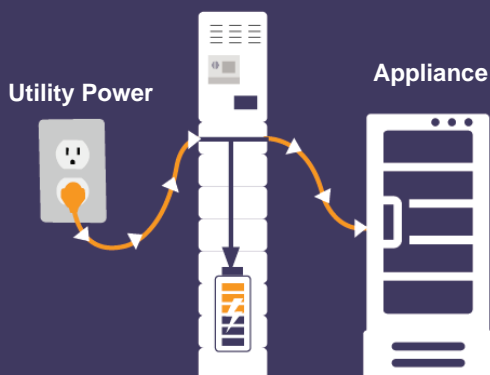


### POWER OUTAGE

*When utility power is lost the system auto transfers to draw from the battery bank within a second*

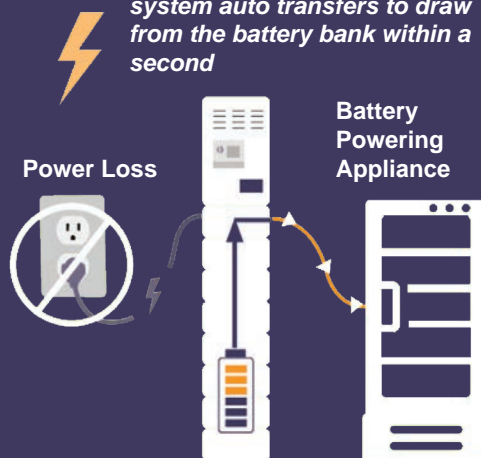

### RECHARGE MODE

*When utility power is restored the System auto transfers back to utility power.*

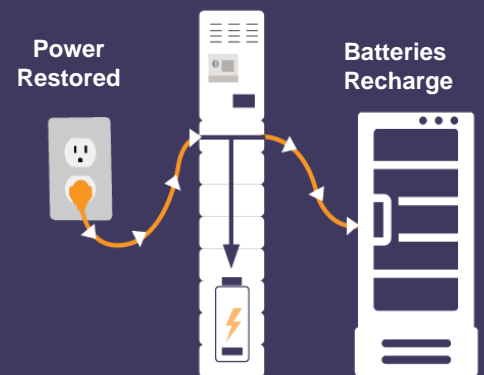

## SILENT SENTRY HARDWIRE SYSTEM

### ELECTRICAL INFORMATION :

Model Number	Wattage	KWH	Phase	Line Power	Load Power	Conductors	Battery Type
SHCS4040V	4,000	4.8	Split	208 / 240 Volts 30 Amps	208 / 240 Volts 30 Amps	2 Legs, 1 Neutral, 1 Ground	AGM (24v Configuration)

### SYSTEM SIZE :

Model Number	Waveform	Width (A)	Depth (B)	Height (C)	Weight (lbs)	Cabinets
SHCS4040V	Pure	18.00"	12.00"	67.00"	485	1

**Heat Output:** Full Bulk Charge Mode: 1450 BTU per hr  
 Inverting @ Full Rated Wattage: 2250 BTU per hr  
 Inverting @ 0 Watts: 85 BTU per hr

**Note:** Unit Onsite Special Certification Inspection - per customer request.

**Warranty:** 2 Year System Warranty - 4 Year Battery Warranty

## UNIT DIMENSIONS

