

# SSH100320V

## MEDI+PRODUCTS


### SILENT SENTRY HARDWIRE SYSTEM



## HOW OUR SYSTEMS WORK:


### STANDBY MODE

*Utility power charges the system and through to power the appliance.*

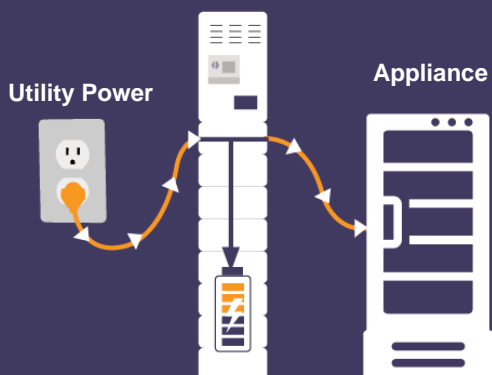


### POWER OUTAGE

*When utility power is lost the system auto transfers to draw from the battery bank within a second*

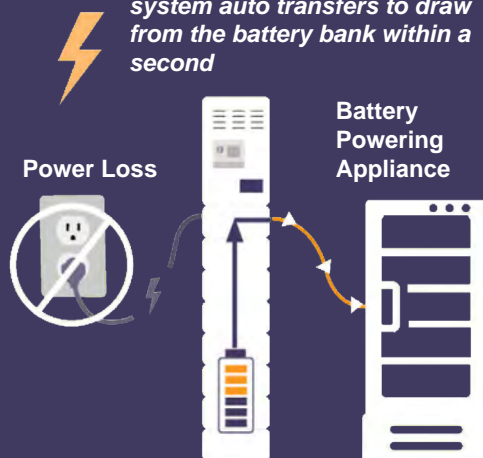

### RECHARGE MODE

*When utility power is restored the System auto transfers back to utility power.*

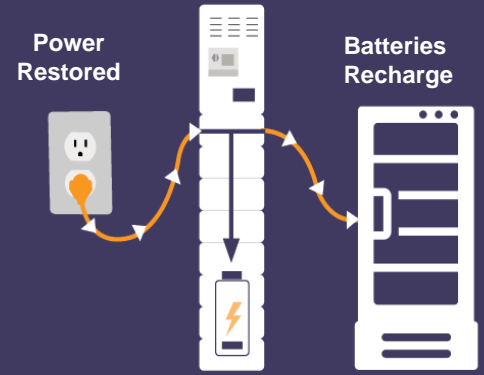

## SILENT SENTRY HARDWIRE SYSTEM

## ELECTRICAL INFORMATION :

| Model Number | Wattage | KWH  | Phase | Line Power                 | Load Power                 | Conductors                     | Battery Type               |
|--------------|---------|------|-------|----------------------------|----------------------------|--------------------------------|----------------------------|
| SSH100320V   | 10,000  | 38.4 | Split | 208 / 240 Volts<br>40 Amps | 208 / 240 Volts<br>40 Amps | 2 Legs, 1 Neutral,<br>1 Ground | AGM<br>(48v Configuration) |

## SYSTEM SIZE :

| Model Number | Waveform | Width (A) | Depth (B) | Height (C) | Weight (lbs) | Cabinets |
|--------------|----------|-----------|-----------|------------|--------------|----------|
| SSH100320V   | Pure     | 78.00"    | 12.00"    | 94.50"     | 3,010        | 3        |

**Heat Output:**      *Full Bulk Charge Mode: 1450 BTU per hr*  
                              *Inverting @ Full Rated Wattage: 2250 BTU per hr*  
                              *Inverting @ 0 Watts: 85 BTU per hr*

**Note:**                *Unit Onsite Special Certification Inspection - per customer request.*

**Warranty:**           *2 Year System Warranty - 4 Year Battery Warranty*

## UNIT DIMENSIONS

