


SSH40320V

MEDI+PRODUCTS


SILENT SENTRY HARDWIRE SYSTEM

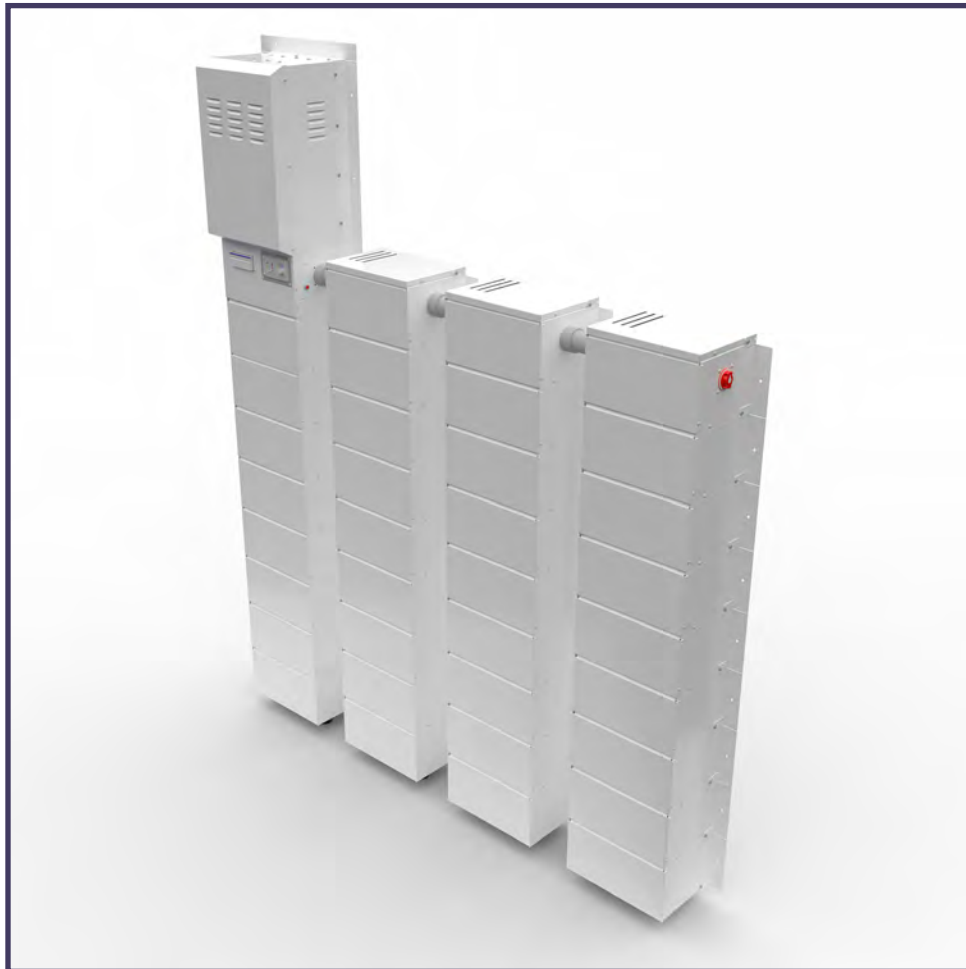

HOW OUR SYSTEMS WORK:


STANDBY MODE

Utility power charges the system and through to power the appliance.

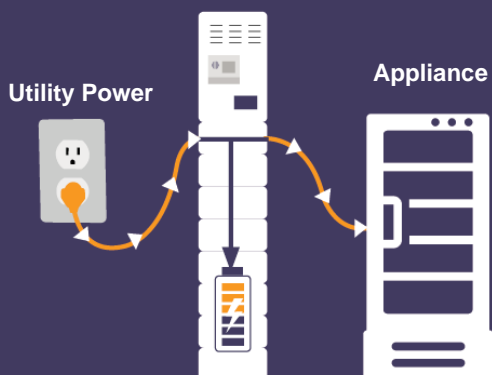


POWER OUTAGE

When utility power is lost the system auto transfers to draw from the battery bank within a second

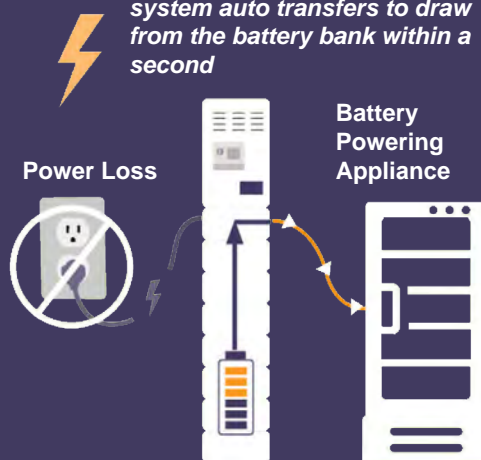

RECHARGE MODE

When utility power is restored the System auto transfers back to utility power.

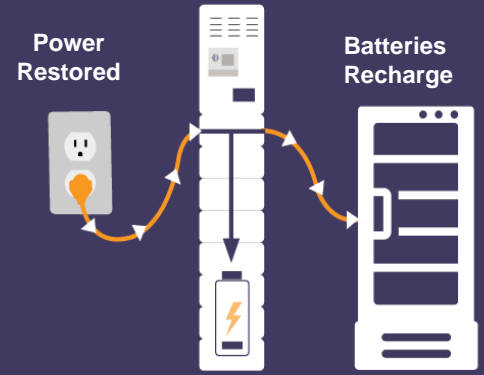

SILENT SENTRY HARDWIRE SYSTEM

ELECTRICAL INFORMATION :

Model Number	Wattage	KWH	Phase	Line Power	Load Power	Conductors	Battery Type
SSH40320V	4,000	38.4	Split	208 / 240 Volts 30 Amps	208 / 240 Volts 30 Amps	2 Legs, 1 Neutral, 1 Ground	AGM (24v Configuration)

SYSTEM SIZE :

Model Number	Waveform	Width (A)	Depth (B)	Height (C)	Weight (lbs)	Cabinets
SSH40320V	Pure	78.00"	12.00"	94.50"	2,895	4

Heat Output: Full Bulk Charge Mode: 1450 BTU per hr
 Inverting @ Full Rated Wattage: 2250 BTU per hr
 Inverting @ 0 Watts: 85 BTU per hr

Note: Unit Onsite Special Certification Inspection - per customer request.

Warranty: 2 Year System Warranty - 4 Year Battery Warranty

UNIT DIMENSIONS

