

SSH60180V-3PH

MEDI+PRODUCTS


Hardwire - 3 Phase - Battery Backup Power System



HOW OUR SYSTEMS WORK:


STANDBY MODE

Utility power charges the system and flows through to power the appliance.

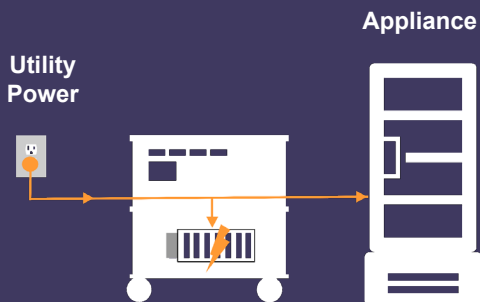

POWER OUTAGE

When utility power is lost the system auto transfers to draw from the battery bank within a second

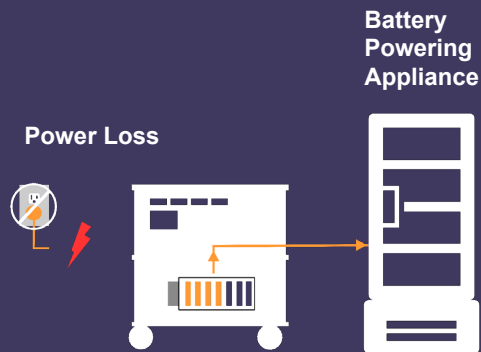

RECHARGE MODE

When utility power is restored the system auto transfers back to utility power.



SSH60180V-3PH

MEDI+PRODUCTS

Hardwire - 3 Phase - Battery Backup Power System

ELECTRICAL INFORMATION:

Model Numbers	Wattage	Line Power	Load Power	Conductors	Battery Type
SSH60180V-3PH	6,000	208 Volts 30 Amps	208 Volts 20 Amps	3 Legs 1 Neutral 1 Ground	AGM

SYSTEM SIZE

Model Numbers	Waveform	Width (A)	Depth (B)	Height (C)	Weight (lbs)	Cabinets
SSH60180V-3PH	Pure	58.00"	9.75"	77.75"	1,890	3

Heat Output: Full Bulk Charge Mode: 8700 BTU per hr
Inverting @ Full Rated Wattage: 13,500 BTU per hr
Inverting @ 0 Watts: 510 BTU per hr

Note: Unit Onsite Special Certification Inspection - per customer request.

Warranty: 2 year System Warranty - 4 year Battery Warranty

UNIT DIMENSIONS

