


SILENT SENTRY SACS 1200 Watt Series

Modular Cabinet Design Offers a Customizable Solution:

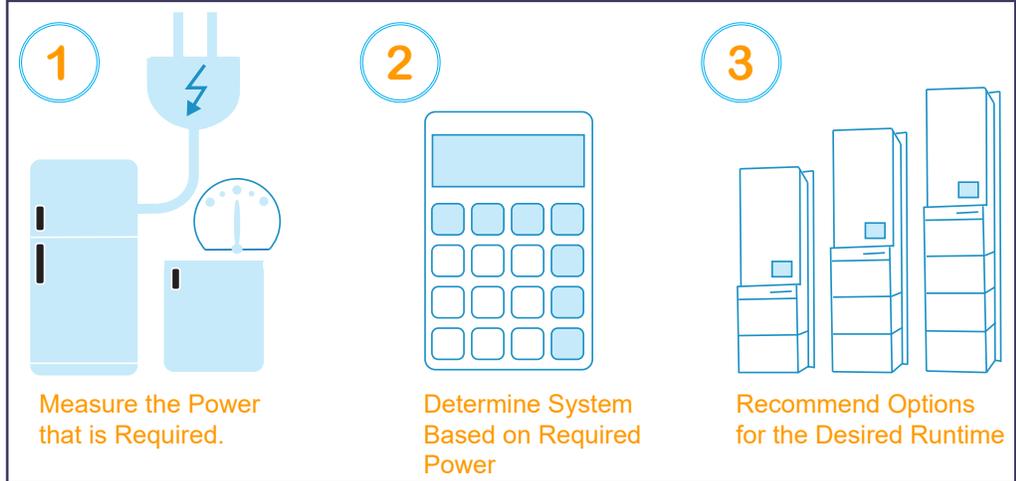

Applications:

- Vaccine Refrigerators
- Lab Equipment
- Incubators
- Mission Critical Medical Devices


Features:

- Internal Transfer Switch
- 1 Duplex Outlet
- Easy to Use Control
- 2 Year Warranty
- 4 Year Prorated Battery Warranty
- Space Saving Design
- No Ventilation Necessary
- No Exhaust or Fumes
- Automatic Transfer (less than 1 sec)
- Audible Low Battery Alarm
- 10' 12 Gauge Power Cord

HOW OUR SYSTEMS WORK:


STANDBY MODE

Utility power charges the system and flows through to power the appliance.

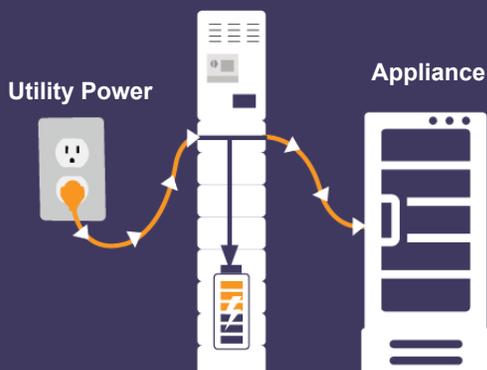


POWER OUTAGE

When utility power is lost the system auto transfers to draw from the battery bank within a second

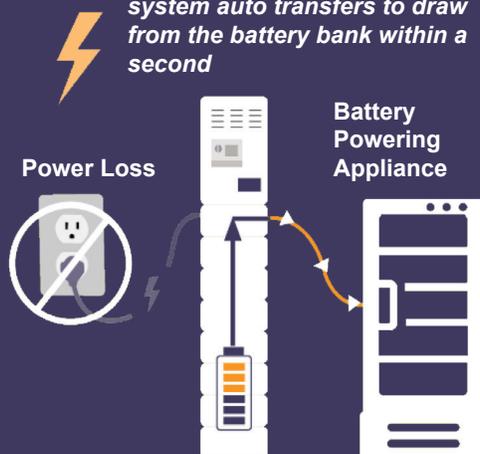

RECHARGE MODE

When utility power is restored the system auto transfers back to utility power.


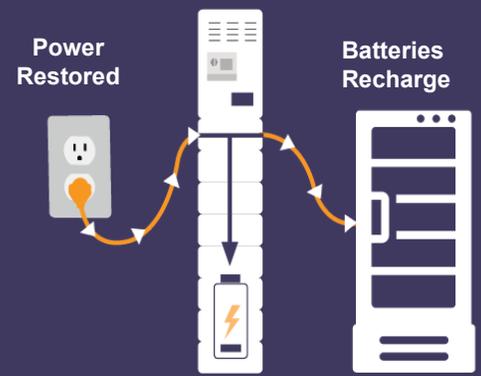


SILENT SENTRY SACS 1200 Watt Series

Model Numbers	Watts	Surge Watts	KWH	Waveform	Height (In)	Weight (lbs)	Feet Included
SACS1210T	1200	2400	1.2	Modified	16.25	160	No
SACS1220T	1200	2400	2.4	Modified	24.00	260	No
SACS1230T	1200	2400	3.6	Modified	35.75	350	Yes
SACS1240T	1200	2400	4.8	Modified	43.50	430	Yes

OTHER OPTIONS:

Voltage	Circuit Size (Amps)	NEMA Number
120	15 A	5-15 

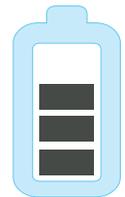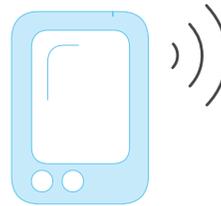

Heat Output:

Full Bulk Charge Mode: 1450 BTU per hr
Inverting @ Full Rated Wattage: 2250 BTU per hr
Inverting @ 0 Watts: 85 BTU per hr

Power Outage Alert:

The optional power outage alert system calls you when a power outage occurs. This feature offers you peace of mind and better control when dealing with power failures.

Battery Monitor Kit:

The optional battery monitor kit enables you to remotely monitor the battery during a power outage via the internet, by offering an estimated runtime based upon the rate of discharge.

UNIT DIMENSIONS

