

SAVERCELL 2400 Watt Series



Applications:

- Vaccine Refrigerators
- Lab Equipment
- Incubators
- Mission Critical Medical Devices


Key Features:

- Expandable Capacity
- X-Boost Mode: Power appliances with 3400W.
- 6 AC Outlets
- Fast Charging
- Sleek Compact Design
- Plug n Play: Effortless Setup for Immediate use.
- Easy to Move/Relocate
- 2 Year Warranty

HOW OUR SYSTEMS WORK:


STANDBY MODE

Utility power charges the system and flows through to power the appliance.

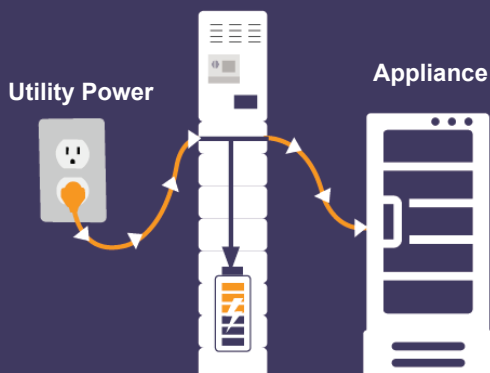


POWER OUTAGE

When utility power is lost the system auto transfers to draw from the battery bank within a second

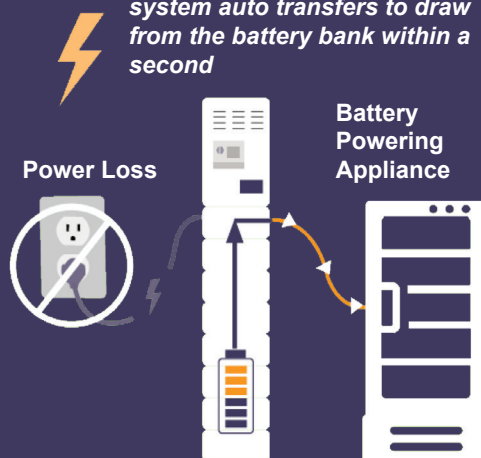


RECHARGE MODE

When utility power is restored the system auto transfers back to utility power.

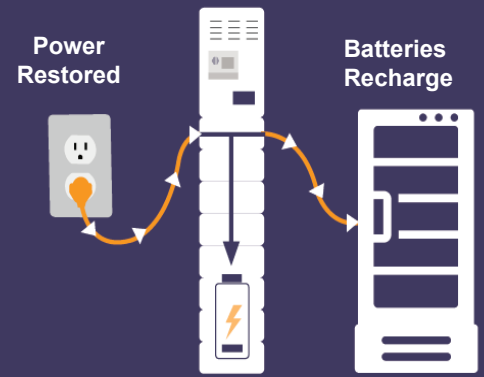

SAVERCELL 2400 Watt Series


Model	Watts	Max Watts	KWH	Waveform	Height (In)	Weight (lbs)
SaverCell	1500	3000	2.08	Pure	11"	48
SaverCell Plus	1500	3000	4.16	Pure	22"	96

Voltage	Circuit Size (Amps)	NEMA Number
120	15 A	5-15 


Additional Features:

Cycle Life: 500 DOD 80%
 Battery Chemistry: NCM
 Certifications: UL Listed

UNIT DIMENSIONS

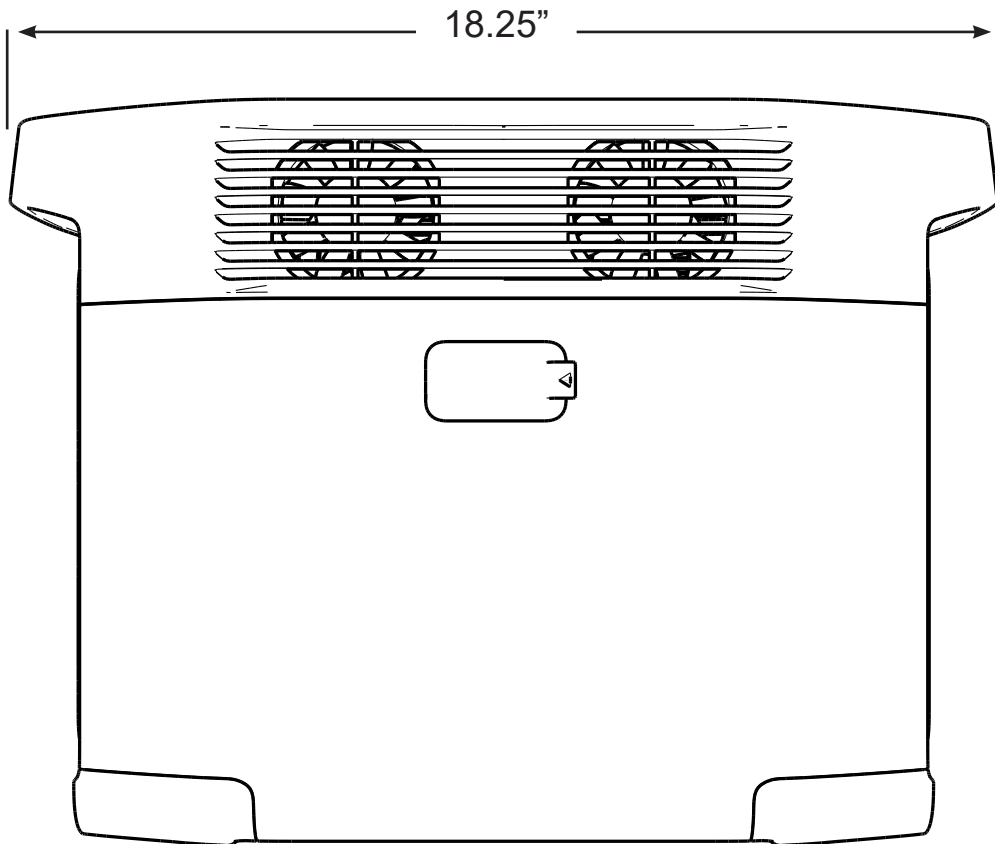

SIDE VIEW

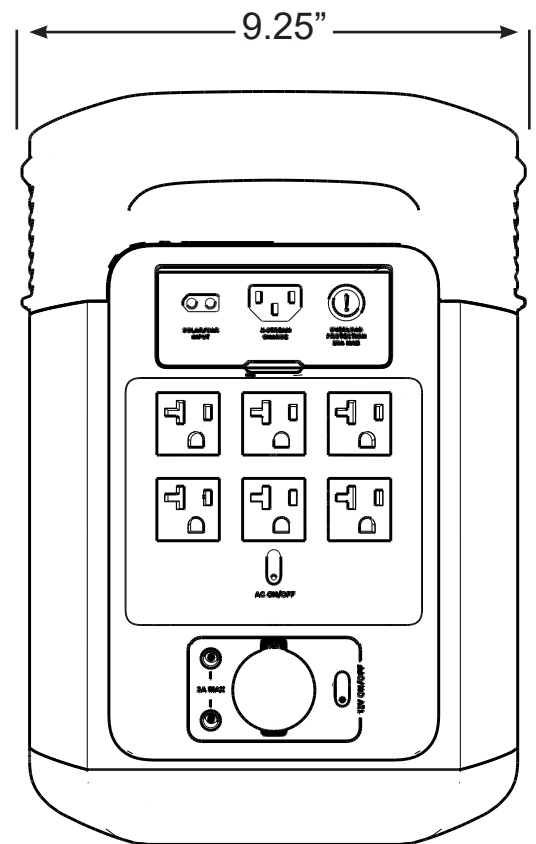

FRONT VIEW